HOME DECORATORS
collection®

BF-24334 DEXTER WALL CABINET WITH DRAWERS WOOD - DOOR

ASSEMBLY INSTRUCTIONS

Made In China

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, Compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B BOTTOM FRAME-1PC	C LEFT SIDE PANEL-1PC
D RIGHT SIDE PANEL-1PC	E 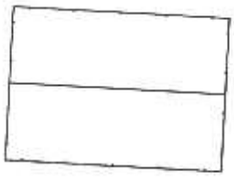 BACK PANEL-1PC	F SHELF-1PC
G 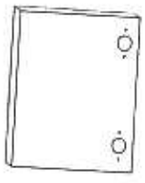 LEFT DOOR-1PC	H 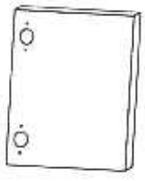 RIGHT DOOR-1PC	I SCREWS-18PCS
J SHELF SUPPORTS-4PCS	K prevent fall down SCREWS-2PCS	L prevent fall down HANGER-2PCS

M CAM-TOOL-1PC	N DOWELS-2PCS	O HANDLE-4PCS
P SCREWS-8PCS	Q  CAM-BOLTS-8PCS	R CAM-LOCKS-8PCS
S 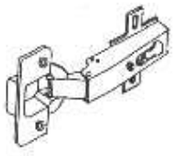 HINGE-4PCS	T SCREWS-16PCS	

REMARK: THE LETTER STICKED IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

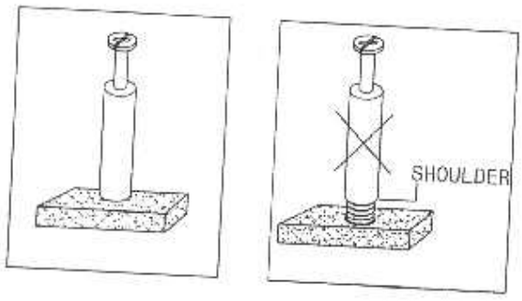

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

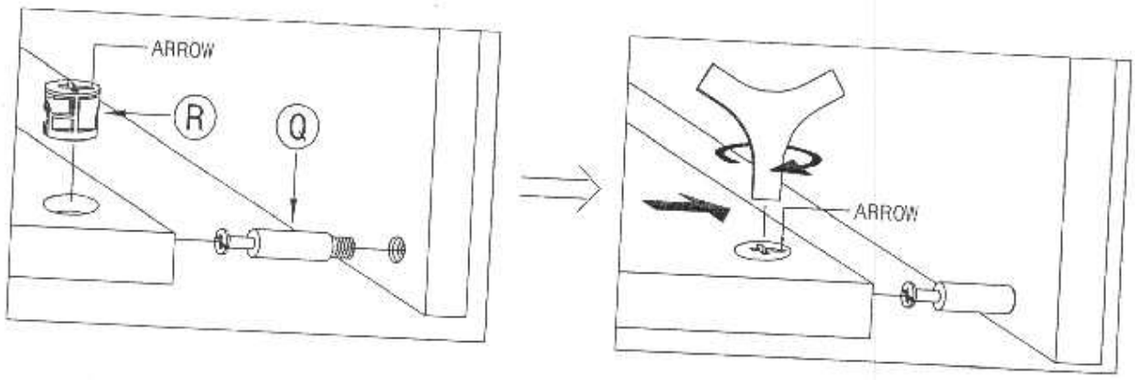

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

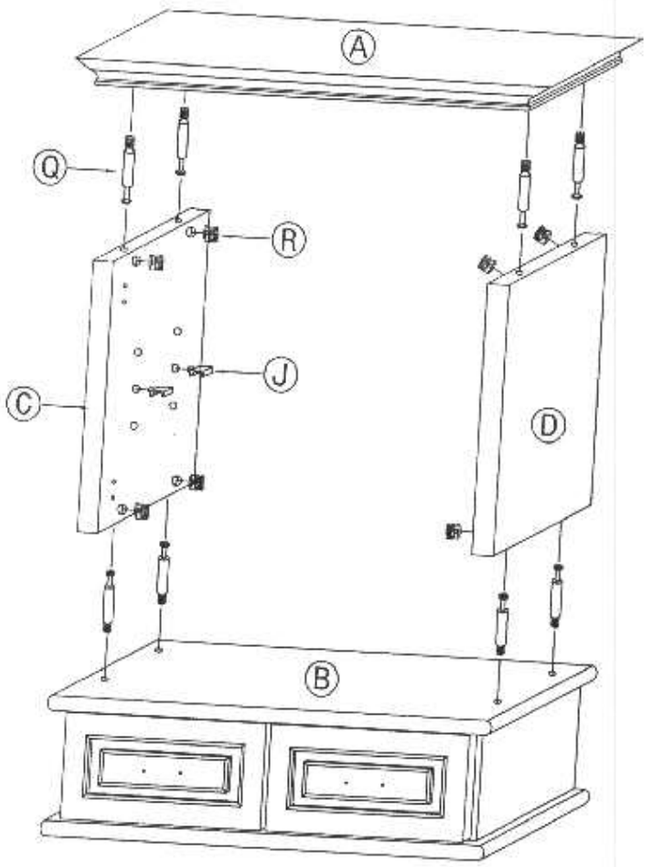

1). ASSEMBLE PANEL(A/C/D)AND BOTTOM FRAME(B).

- ROTATE THE 8 CAM-BOLTS(Q)INTO HOLES IN TOP PANEL(A)AND BOTTOM FRAME(B).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(C/D)AND ATTACH USING CAM-LOCKS(R).
- INSERT 4 SHELF SUPPORTS(J)INTO HOLES IN SIDE PANEL(C/D).

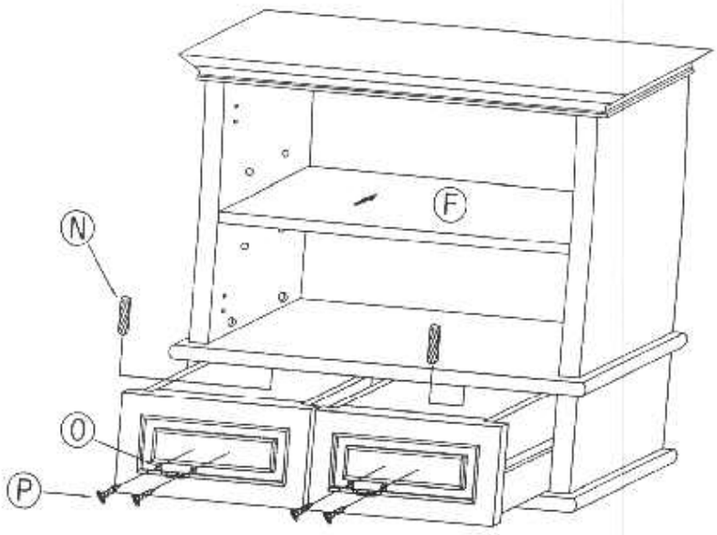

2). ASSEMBLE SHELF(F).

- PUT SHELF(F)ONTO SHELF SUPPORT(J) .
- ATTACH THE HANDLE(O)TO DRAWER PANEL FRONT USING SCREWS(P).
- INSERT THE DOWELS(N)INTO HOLES IN BOTTOM FRAME(B)AND SLIDER THE DRAWERS.

NOTE: (Attach right door(H)by the same method as left door(G) with hinge and screws.

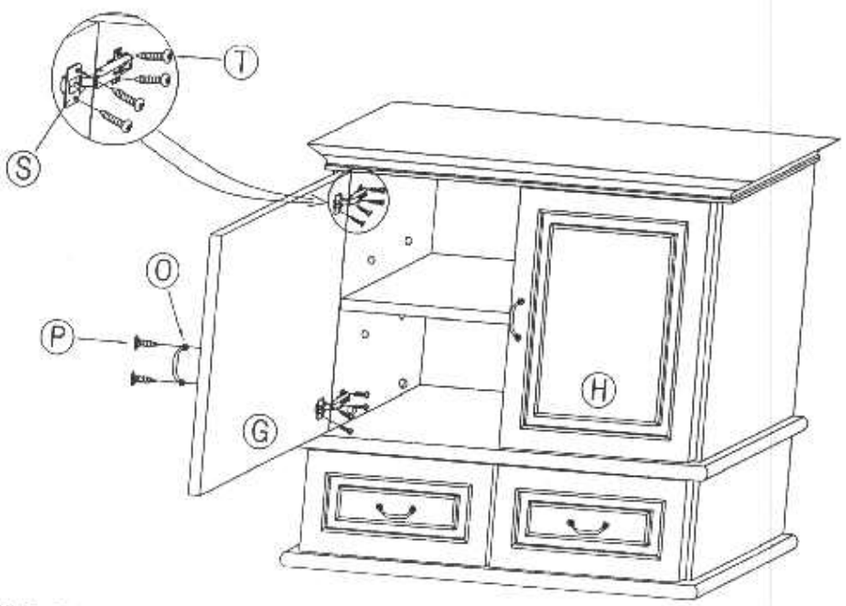

3). ASSEMBLE THE DOORS(G/H).

- ATTACH THE HANDLE(O)TO LEFT DOOR(G)USING SCREW(P).
- ATTACH 2 HINGE(S)TO LEFT DOOR(G)AND LEFT SIDE PANEL(C)USING 8 SCREWS(T).

Note:Before you assemble the back panel,please make sure the doors have an even gap around them.If uneven,shift the unit LEFT OR RIGHT UNTIL the doors are evenly spaced,then attach back panel.

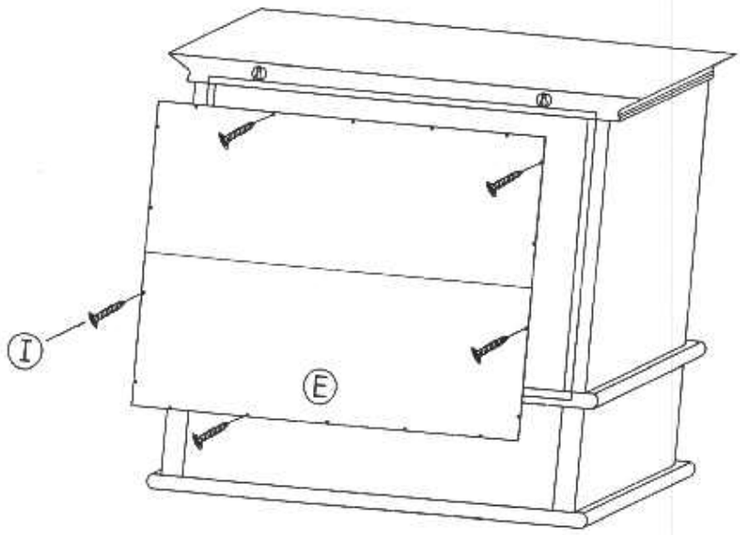

4). ASSEMBLE THE BACK PANEL(E).

- ATTACH BACK PANEL(E)TO TOP/SIDE PANEL AND BOTTOM FRAME USING SCREWS(I).

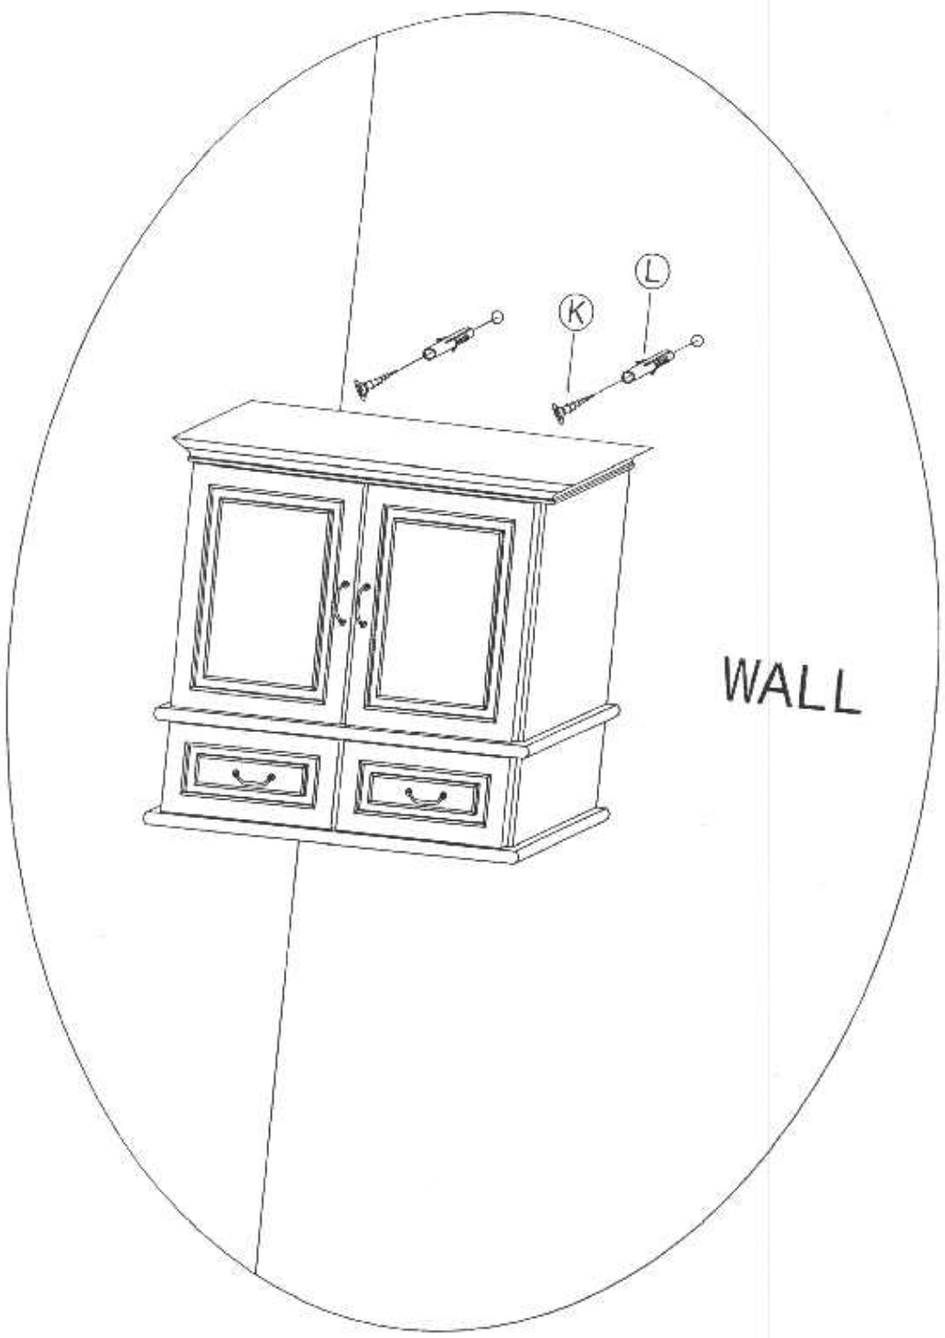

5). ASSEMBLE HANGER(L).

- DRILL TWO SMALL HOLES INTO THE WALL EQUAL DISTANCE AS THE HOLES ON THE BACK PANEL.
- INSERT 2 HANGER(L)INTO THE WALL HOLES AND ROTATE THE 2 SCREWS(K)INTO HANGER(L).
- FINALLY,HANG THE CABINET ONTO THE SCREWS(K).